



#### Standard Equipment:

- Automatic water filling system
- Liquid level gauge
- Multipoint core probe
- Integrated drain in bottom with electronic closing/opening system, 2 speeds of tilting
- Automatic basket lifting with safety sensor for lifting arm - possibility of cooking in baskets with closed cover
- Integrated retractable shower
- Integrated socket 230 V /16 A
- USB port – backup and data transfer
- HACCP data, Internet connection
- Optional version for plinth installation

#### Technology:

Boiling  
Gentle boiling  
Deep frying  
Frying  
Braising  
Low temperature cooking  
Grilling  
Confit  
Sous – vide  
Overnight cooking  
Temperature range : 30°C–250°C

#### Functions:

Automatic and manual cooking process  
12" colour touch screen with intuitive control  
Language mutation  
Possibility to create and save own programs  
Actual values visible on screen  
Precise sensor temperature control  
Memory of 800 programs with 12 steps  
Clear visualisation of the cooking process on the display  
Display of error messages on the display  
Technical and service information  
Display lock adjustable On / Off

#### Construction:

Unit base frame - material CNS (DIN 1.4301), minimum thickness 2 mm  
Frame housing material CNS (DIN 1.4301)  
Pan - material CNS (DIN 1.4401), welded on both sides  
Special bottom of the pan  
JPX 17 heating system with full-surface heat distribution using stainless steel heating elements  
Preheating time of the pan base to the operating temperature of 180 °C within 3 minutes  
Double-walled, robust lid  
Steam removal through the chimney in the centre of the lid  
Central power, water and waste water connections  
Gapless block construction of several appliances next to each other possible  
Certificates: CE, TÜV-SÜD

#### Distributor:

Welbilt Deutschland GmbH  
Talstraße 35, 82436 Eglfing, Germany

Tel: +49(0)8847 67-0  
Fax: +49(0)8847 414

[www.convotherm.com](http://www.convotherm.com)

#### Manufactured by:

JIPA International s.r.o. Belnická 603,  
252 42 Jesenice u Prahy I Czech Republic

[www.jipainternational.cz](http://www.jipainternational.cz)

### Convotherm flexx pro 101 DM

Technical data

Electric

Water

Weight

#### Technical Data:


Volume: 2 x 49 Liter – DIN 18857  
 GN capacity: 2 x GN 1/1  
 Bottom pan dimension: 2 x 452 x 558 mm  
 Depth: 220 mm  
 Cooking surface: 2 x 25 dm<sup>2</sup>  
 Dimensions (WxDxH): 1580 x 850 x 1050 mm  
 Weight: 335 kg

#### Electric Connection:

3N~ 400V 50Hz  
 Power connected load: 27,5 kW  
 Fuse: 40 A

#### Water Connection:

Water inlet: R3/4  
 Water outlet: DN - 50  
 Connection to hot water up to 50°C possible

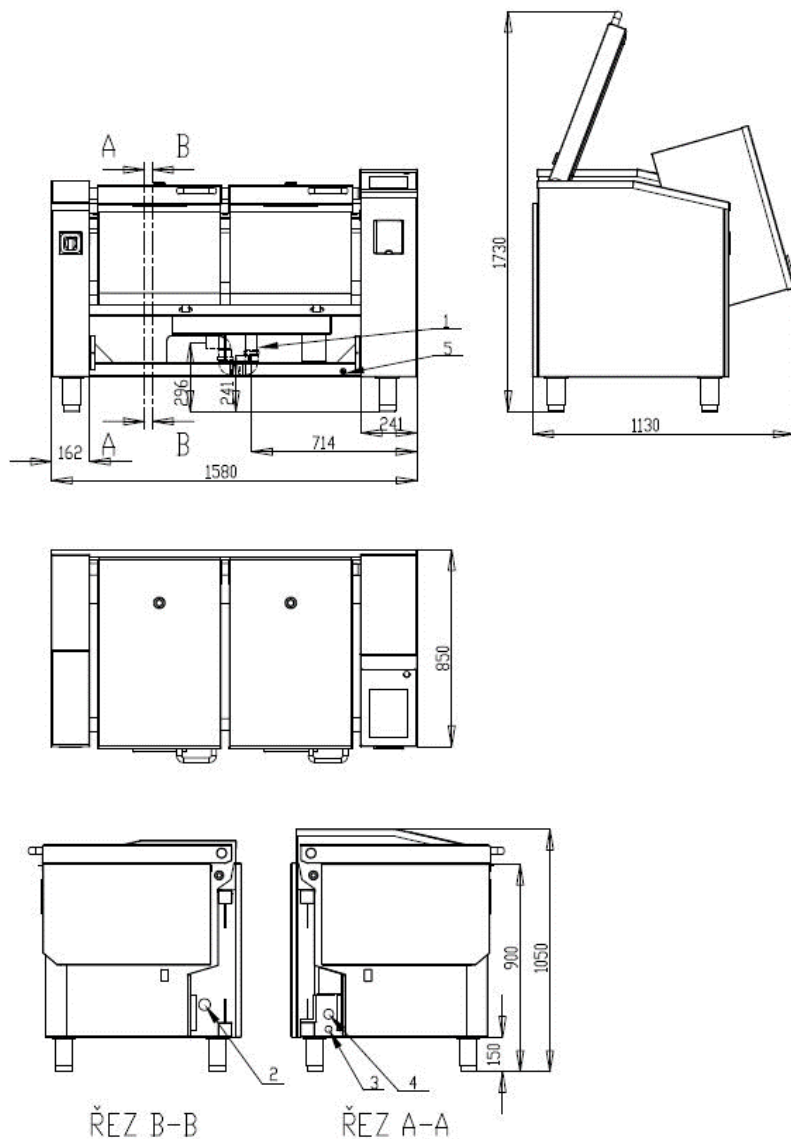

- ① Drain DN 50
- ② Water connection
- ③ Electric connection
- ④ Ethernet socket RJ 45
- ⑤ Ground

#### Distributor:

Welbilt Deutschland GmbH  
 Talstraße 35, 82436 Eglfing, Germany

Tel: +49(0)8847 67-0  
 Fax: +49(0)8847 414

[www.convotherm.com](http://www.convotherm.com)

#### Manufactured by:

JIPA International s. r. o. Belnická 603,  
 252 42 Jesenice u Prahy I Czech Republic









[www.jipainternational.cz](http://www.jipainternational.cz)

Multifunction cooking device

Convotherm flexx pro 101 DM

Recommended accessories:

Accessories

	Part no.	101 DS	101 DM	101 DL	101	101 P	151	151 P	201
	Battery powered lifting trolley	AC-00001	✓	✓	✓	✓	✓	✓	✓
	Oil filtration trolley	AC-00002	✓	✓	✓	✓	✓	✓	✓
	Handling trolley for baskets	AC-00003	✓	✓	✓	✓	✓	✓	✓
	Basket Extension Arm	AC-01-001	✓	-	-	-	-	-	-
	Basket Extension Arm	AC-01-009	-	✓	-	-	-	-	-
	Basket Extension Arm	AC-01-003	-	-	✓	✓	-	-	-
	Basket Extension Arm	AC-01-010	-	-	✓	-	-	-	-
	Basket Extension Arm	AC-01_005	-	-	-	-	✓	✓	-
	Basket Extension Arm	AC-01-007	-	-	-	-	-	-	✓
	Stainless steel stand with pull-out shelves	AC-05-002	✓	-	-	-	-	-	-
	Stainless steel stand with pull-out shelves (on castors)	AC-05-003	✓	-	-	-	-	-	-
	Sieve DS	AC-04-001	✓	-	-	-	-	-	-
	Sieve DL	AC-04-011	-	-	✓	-	-	-	-
	Sieve DM	AC-04-008	-	✓	-	-	-	-	-
	Sieve	AC-04-003	-	-	✓	✓	✓	✓	✓
	Spatula small	AC-03-001	✓	✓	-	-	-	-	-
	Spatula big	AC-03-002	-	-	✓	✓	✓	✓	✓
	Spatula for omelette	AC-03-004	✓	✓	✓	✓	✓	✓	✓
	Cooking basket F	AC-02-005	-	✓	-	-	-	-	-
	Cooking basket	AC-02-003	-	-	✓	✓	✓	✓	✓
	Cooking basket DS	AC-02-001	✓	-	-	-	-	-	-
	Frying basket DS	AC-02-002	✓	-	-	-	-	-	-
	Frying basket DL	AC-02-012	-	-	✓	-	-	-	-
	Frying basket DM	AC-02-013	-	✓	-	-	-	-	-
	Frying basket	AC-02-004	-	-	✓	✓	✓	✓	✓
	Grate for NT / DM	AC-02-011	-	✓	-	-	-	-	-
	Grate for NT / DL	AC-02-010	-	-	✓	-	-	-	-
	Grate for NT	AC-02-009	✓	-	-	✓	✓	✓	✓
	Cleaning sponge	AC-99-001	✓	✓	✓	✓	✓	✓	✓

Recommended set of accessories: 1x 2x 3x 4x 6x 8x

Note: Subject to errors and changes. All prices in Euro. The general terms and conditions of Welbilt Deutschland GmbH shall apply. GN = Gastro-norm 325 mm x 530 mm. All previous price lists are replaced by this current version.

ENG 05/2024 | Continuous improvements to the product may mean changes to the specification are made without explicit mention

Distributor:

Welbilt Deutschland GmbH  
Talstraße 35, 82436 Eglfing, Germany

Tel: +49(0)8847 67-0  
Fax: +49(0)8847 414

www.convotherm.com

Manufactured by:

JIPA International s. r. o. Belnická 603,  
252 42 Jesenice u Prahy I Czech Republic

www.jipainternational.cz