



ELECTRICAL FOOD PROCESSOR

DIGITAL DISPLAY SCREEN

Ref. : CL250

- ✓ FOOD PROCESSOR 1100 W.
- ✓ VOLTAGE 220 - 240 V / SINGLE-PHASED.
- ✓ WITH DIGITAL DISPLAY SCREEN.
- ✓ VARIABLE SPEED FROM 350 RPM TO 3500 RPM.
- ✓ 10 SPEED LEVELS.
- ✓ 5.4 LITRES STAINLESS STEEL BOWL (RATED CAPACITY).
- ✓ 4.3 LITRES (OPERATING CAPACITY).
- ✓ SMOOTH EDGED BLADE (AS STANDARD).



STAINLESS
STEEL &
METAL
MOTOR
BASE



VARIABLE SPEED
WITH DIGITAL DISPLAY SCREEN

ADVANTAGES

- French design and manufacture, guaranteed quality, robustness and repairability - The DYNAMIC food processor is easily disassembled, repairable and reassembled. DYNAMIC guarantees the immediate availability of spare parts.
- Thanks to its unique design, this is an extremely versatile and aesthetic device. The design is based on users' real needs: the use of first quality materials (stainless steel), thought-out ergonomics, details and tips guaranteeing hygiene and safety (patent pending).
- Upgradeable device into combined vegetable slicer / food processor.
- A product designed with sustainable development in mind – 80% of the materials used are made from stainless steel and aluminium.

DESCRIPTION

- Cutter for mixing, emulsifying, blending and chopping in seconds. Variable speed from 350 to 3500 rpm. PULSE and REVERSE functions. TIMER and CHRONOMETER functions. 5.4 litres stainless steel bowl (rated capacity) + Copolyester Tritan lid, equipped with an integrated manual scraper arm to avoid waste and for improved blending. Quick release system with clip fasteners (patent pending). Ability to add ingredients during preparation without opening the lid.
- An induction motor, integrated in the metal motor block, with a power of 1100 W and a single-phased power supply of 220 - 240 V. Easy-to-use control panel.
- All parts in contact with food are easily removable and dishwasher-proof for quick cleaning.
- Magnetic detection which prevents the appliance from starting if an anomaly is detected. The appliance stops as soon as it detects any type of inappropriate use.
- WORKING CAPACITY: from 100g to 4kg.
- Supplied with a smooth blade with inverted cutters, enables you to save time and helps preserve sensory properties (patented system).

MAIN CHARACTERISTICS

- Food processor mixer, robust and reliable emulsifier for grinding, chopping, emulsifying and kneading.
- Supplied with a standard scraper arm.
- Adapted productivity for 20 to 100 covers per service.
- Removable, transparent lid with opening to add ingredients during preparation.
- All parts in contact with food are easily removable and dishwasher-proof.
- Easy-to-use waterproof control panel with on/off button, selected speed displayed, speed adjuster (10 speed levels), "PULSE" and "REVERSE" functions, TIMER and COUNTDOWN TIMER functions. The digital display enables you to navigate on the screen and access the different operating modes: 1 fixed speed, 2 fixed speeds, variable speed. The "PULSE" function enables grinding and precision work, the "REVERSE" function enables gentle mixing and preserves the added ingredient entirely.
- Automatic magnetic detection on the stainless steel bowl and lid for total operator safety.

www.dynamicmixers.com

Dynamic - 518 rue Léo Baekeland BP57 - 85290 Mortagne sur Sèvre

Tel : +33 (0)2 51 63 02 72 • E-mail : export@dynamicmixers.com

Follow us on our social media accounts !



CONSTRUCTION

- An induction motor, integrated in the motor block, ensuring robustness and reliability over time.
- Integrated air vents on the motor unit for good engine ventilation.
- Extremely solid base.
- POWER: 1100 W
- VOLTAGE : 220 - 240 V / SINGLE-PHASED.
- 10 SPEEDS : 350 R.P.M. to 3500 R.P.M.
- 5.4 litres Stainless steel bowl (rated capacity) or an operating capacity of 4.3 Litres.
- Copolyester Tritan lid without BPA (Bisphenol A).

ACCESSORIES INCLUDED

- 1 x stainless steel bowl with a capacity of 5.4 litres.
- 1 x lid with integrated wiper for 5.4 litres stainless steel bowl.
- 1 x smooth edged blade food processor.



OPTIONAL ACCESSORIES


- **CL8002 :**
SERRATED BLADE
FOOD PROCESSOR
FOR GRINDING,
FOR HERBS, SPICES,
PASTRY...



- **CL9000 :**
VEGETABLE SLICER
COMPLETE KIT :
HANDLE, COVER,
CHUTE, PUSHER
AND EJECTOR.



TECHNICAL SPECIFICATIONS

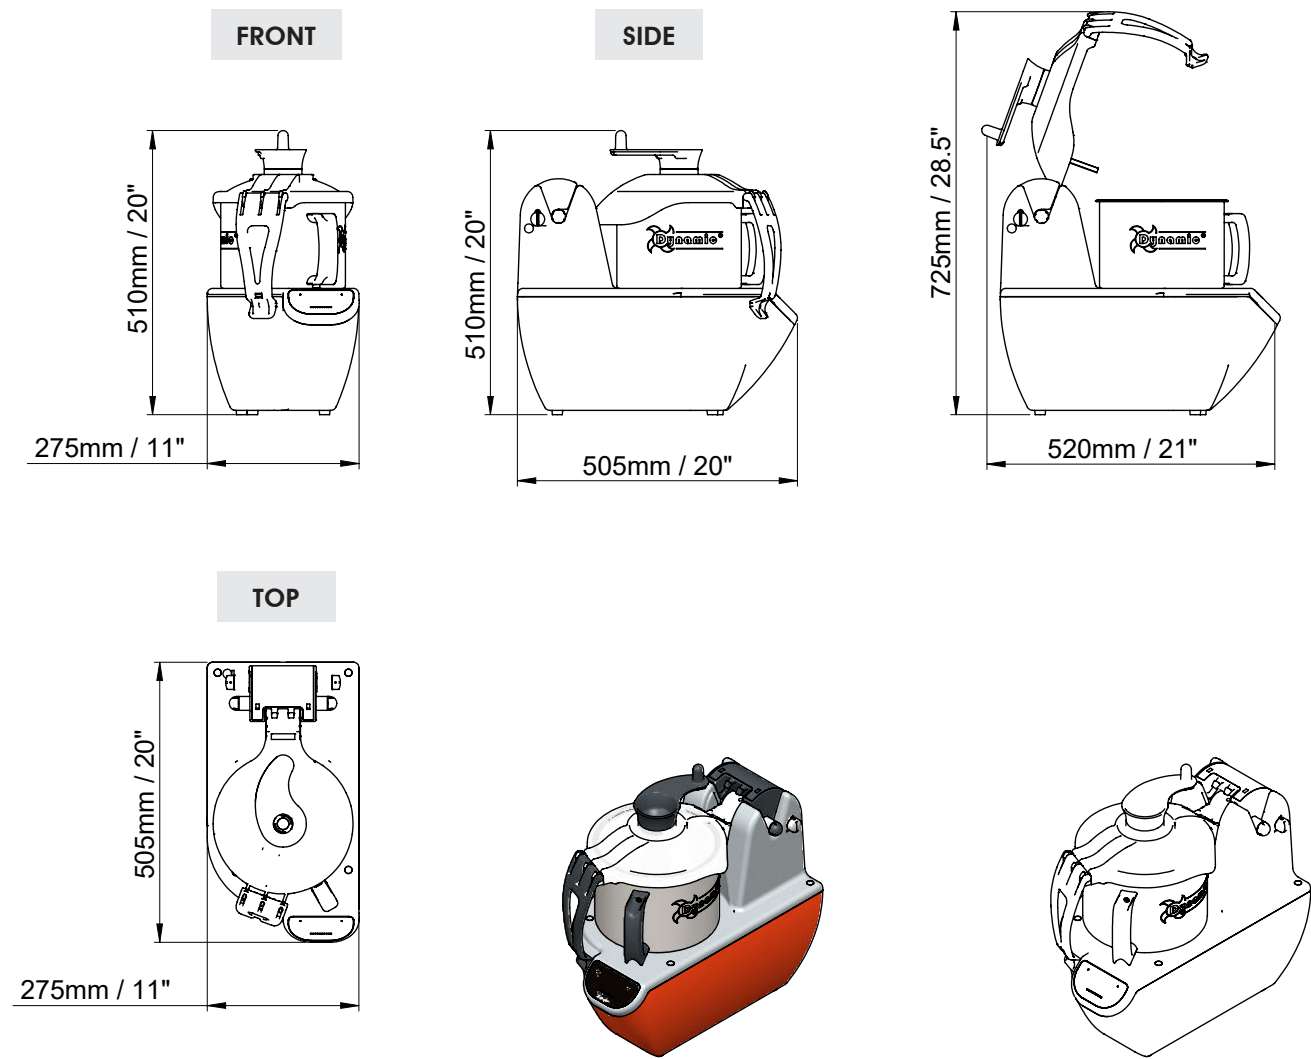

ELECTRICAL FEATURES	
VOLTAGE	220 - 240 V / 50 - 60 Hz
POWER	1100 W

CUTTER CAPACITY	
RATED CAPACITY	5.4 Litres
OPERATING CAPACITY	4.3 Litres

GENERAL INFORMATION	
WIDTH	275 mm
HEIGHT	510 mm
DEPTH	505 mm